




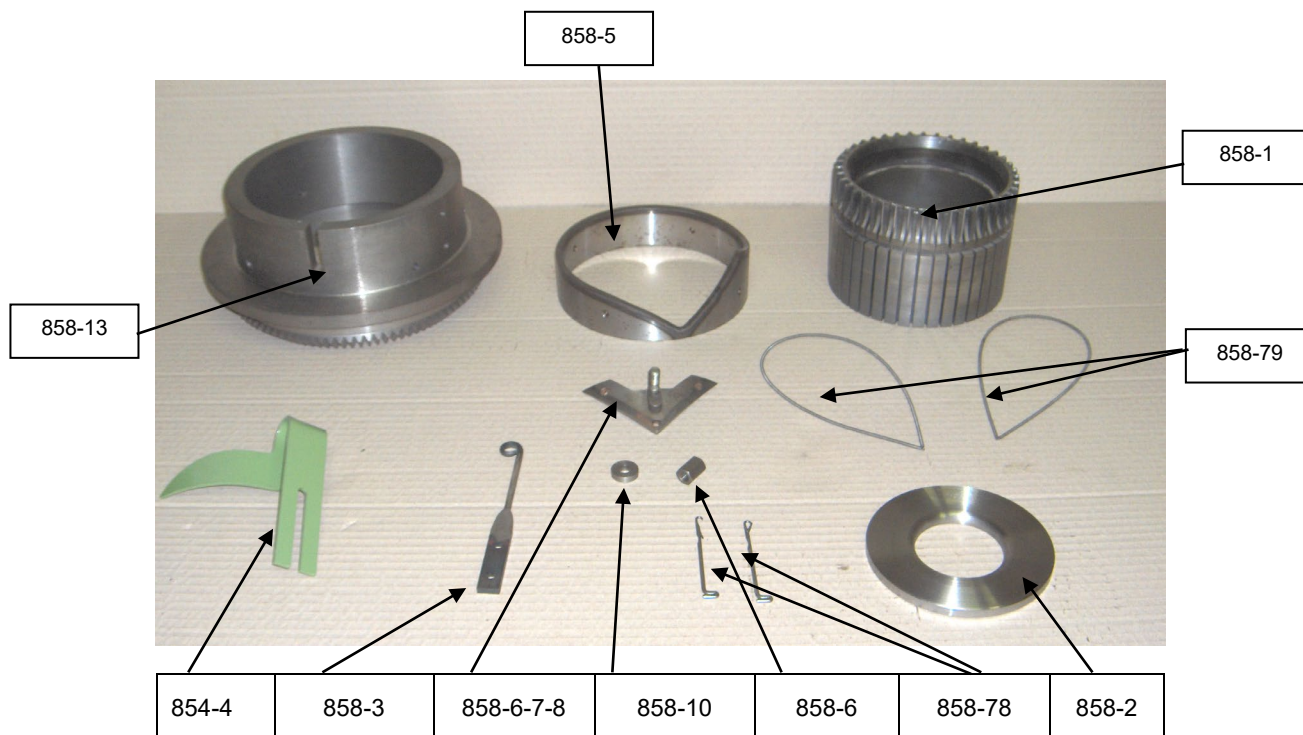


Part No.	Item
858-1	Needle cylinder
858-2	Reducing ring
858-3	Wire guide
858-4	Down holder
858-5	Cylinder cam
858-6	Triangle cam
858-7	Guide face
858-8	Threaded bolt
858-9	Nut
858-10	Washer
858-13	Cylinder with bevel wheel
858-78	Needles
858-79	Spring

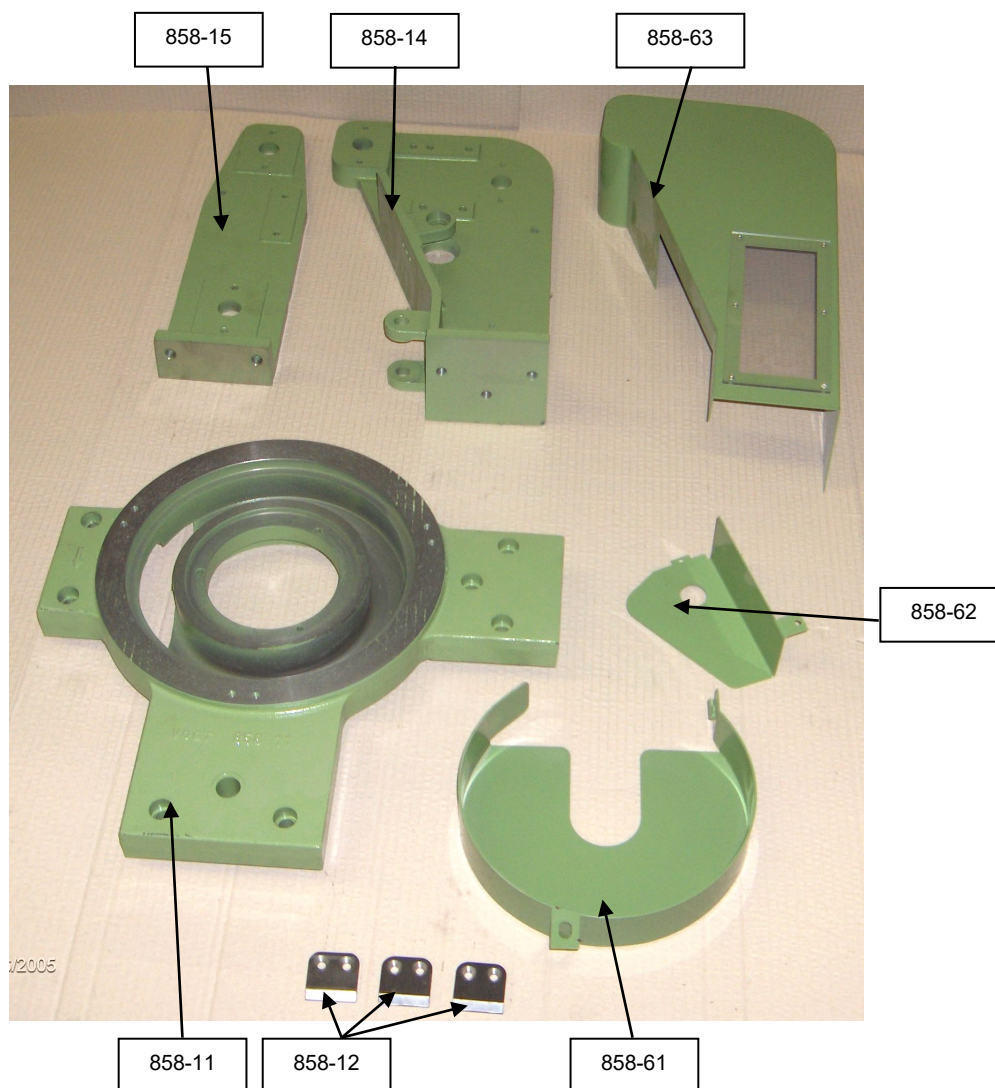


Part No.	Item
858-11	Base plate
858-12	Cover plate
858-14	Casing
858-15	Bearing block
858-61	Safety guard
858-62	Safety guard
858-63	Casing cover

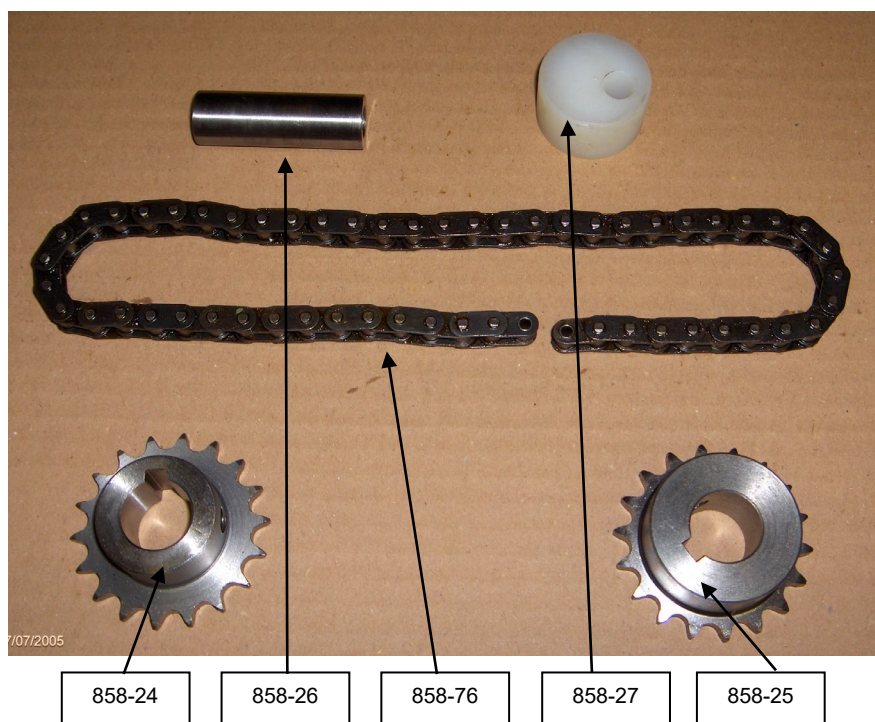


Part No.	Item
858-24	Sprocket 18 teeth
858-25	Sprocket 19 teeth
858-26	Spacer sleeve
858-27	Eccentric roll
858-76	Chain

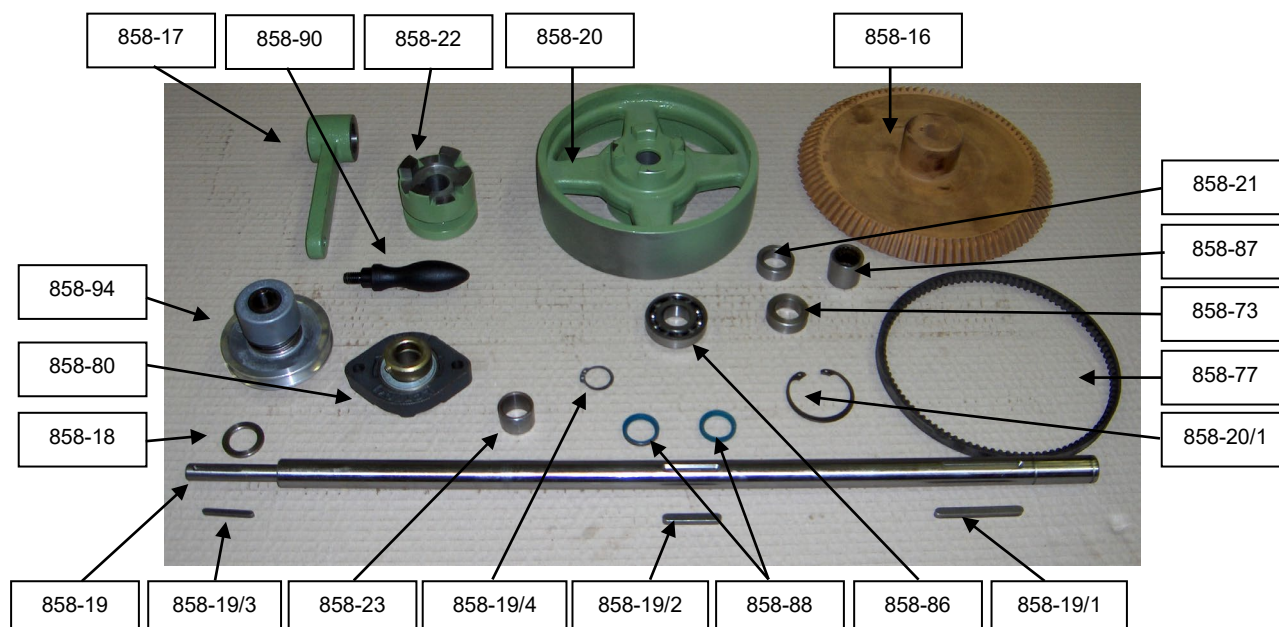


Part No.	Item
858-16	Bevel wheel
858-17	Starting handle
858-18	Washer
858-19	Shaft
858-19/1	Key 6x6x60
858-19/2	Key 6x6x40
858-19/3	Key 4x4x35
858-19/4	Locking ring Ø 20 mm
858-20	Pulley
858-20/1	Locking ring Ø 47 mm
858-21	Spacer sleeve
858-22	Clutch
858-23	Spacer sleeve
858-73	Set collar
858-77	V-belt
858-80	Flange bearing
858-86	Ball bearing
858-87	Free wheel brake roller
858-88	Gasket
858-90	Ball type handle
858-94	Variable speed pulley

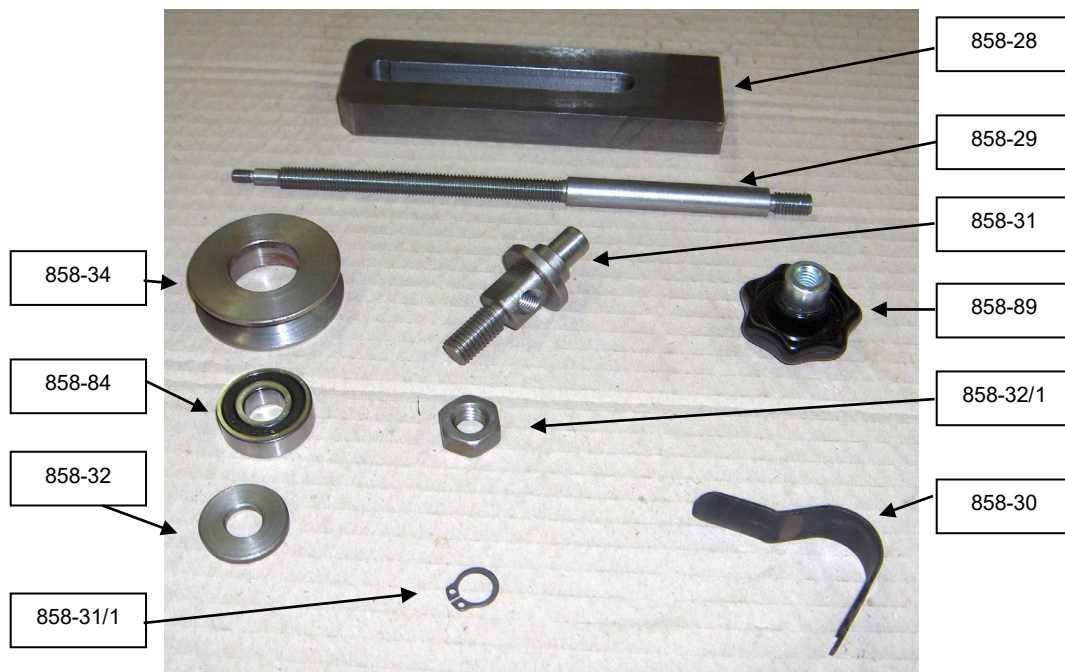


Part No.	Item
858-28	Belt-tightener
858-29	Adjusting spindle
858-30	Spring clip
858-31	Double bolt
858-31/1	Locking ring Ø 10 mm
858-32	Washer
858-32/1	Nut
858-34	Belt tensioning roller
858-84	Ball bearing
858-89	Star handle

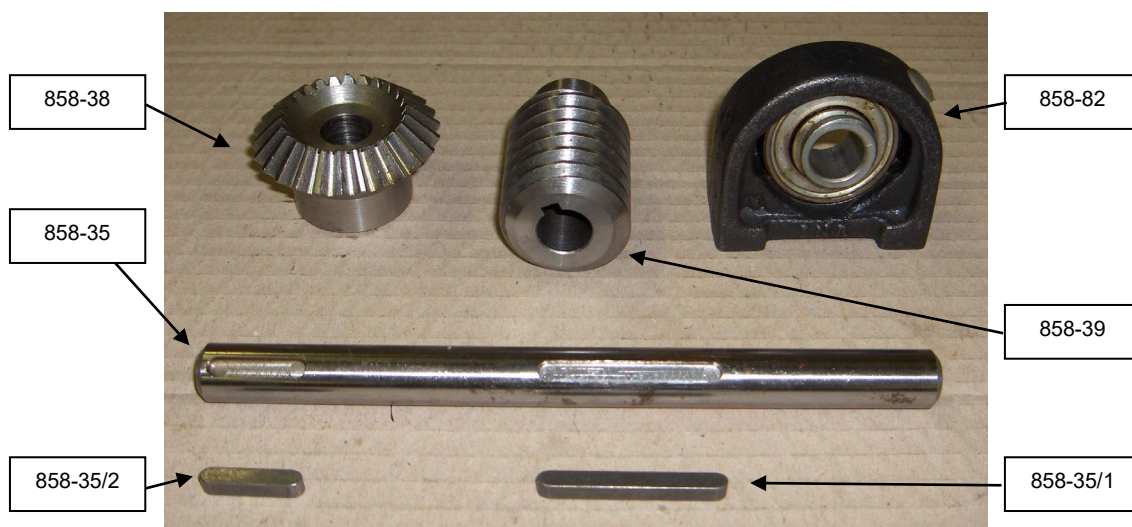


Part No.	Item
858-35	Shaft
858-35/1	Key 5x5x45
858-35/2	Key 5x5x25
858-38	Bevel wheels
858-39	Worm
858-82	Bearing

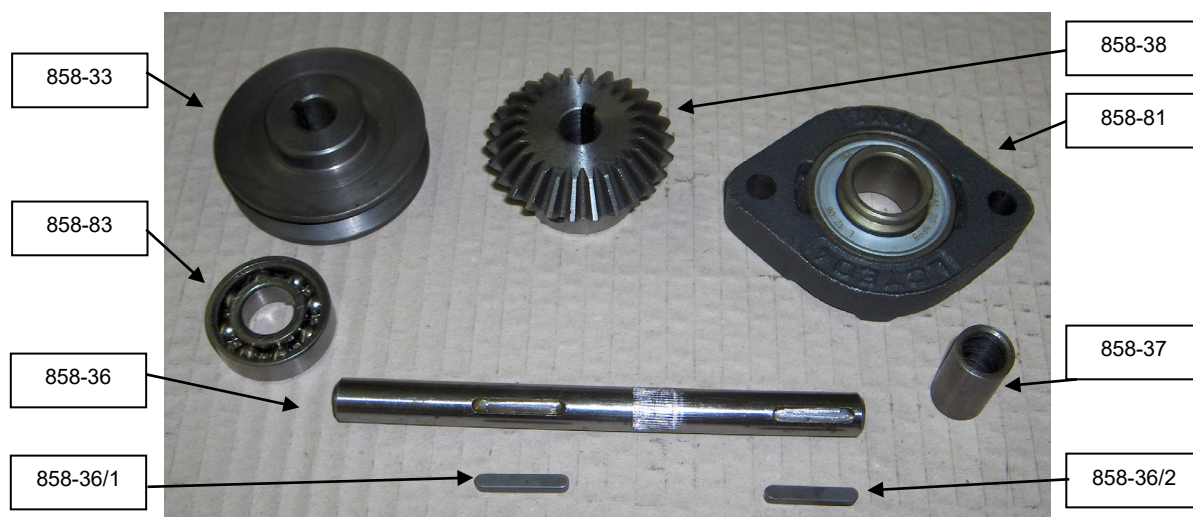


Part No.	Item
858-33	V-belt pulley
585-36	Shaft
858-36/1	Key 4x4x25
858-36/2	Key 4x4x22
858-37	Spacer sleeve
858-38	Bevel wheels
858-81	Flange bearing
858-83	Ball bearing

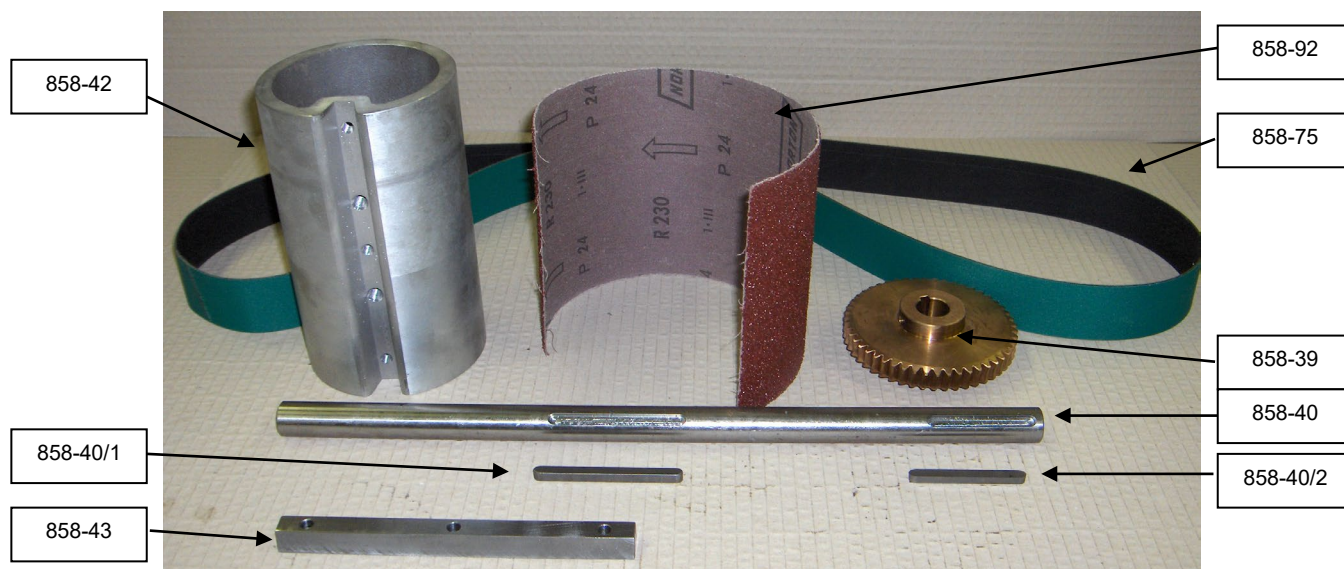


Part No.	Item
858-39	Worm wheel
858-40	Shaft
858-40/1	Key 6x6x75
858-40/2	Key 6x6x60
858-42	Feed cylinder
858-43	Key
858-92	Emery cloth
858-75	Driving belt

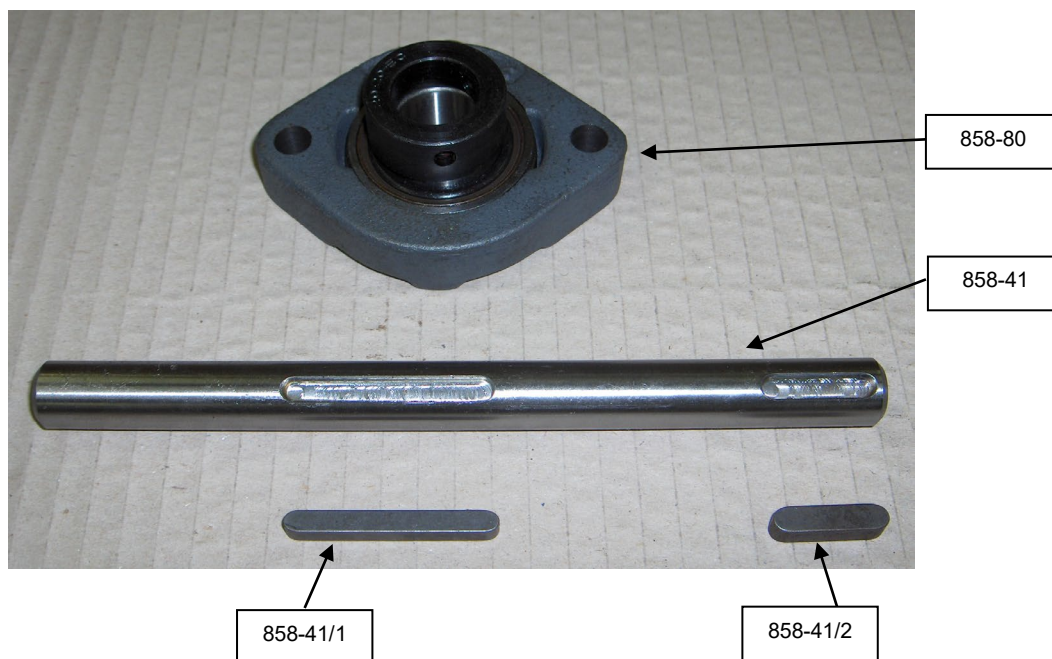


Part No.	Item
858-41	Shaft
858-41/1	Key 6x6x75
858-41/2	Key 6x6x25
858-80	Flange bearing

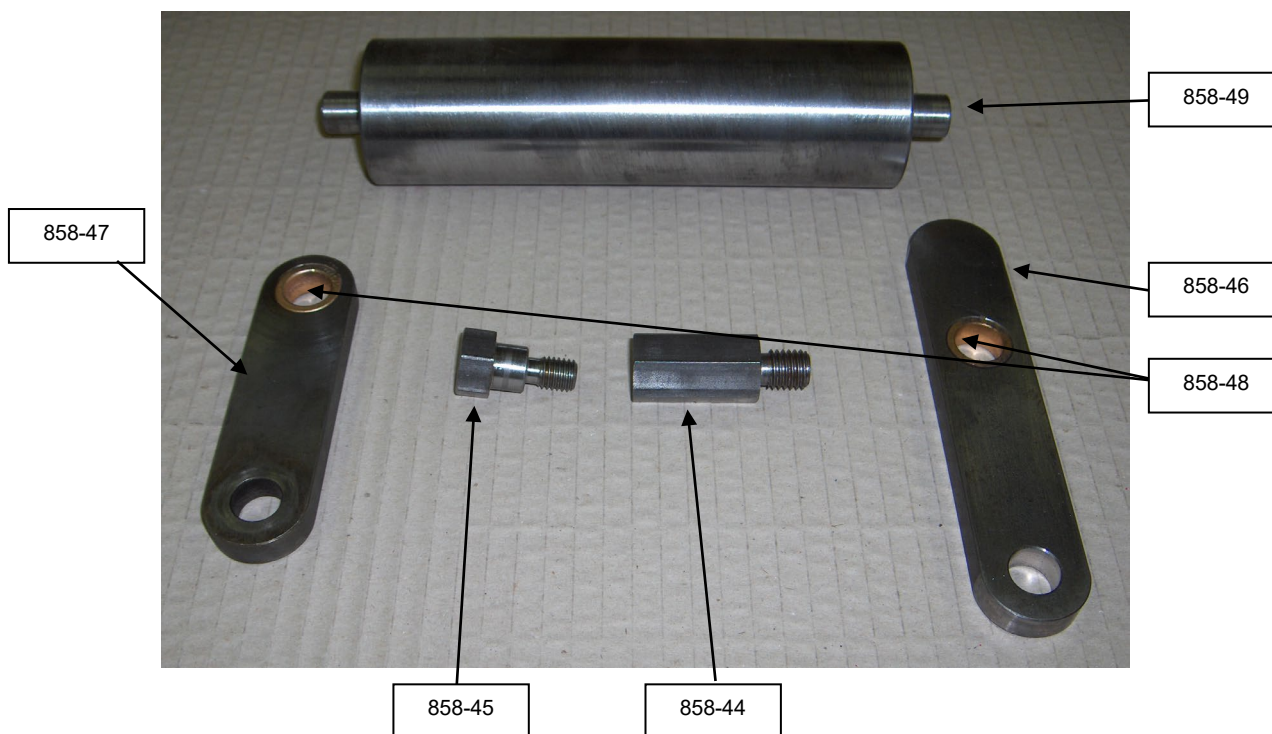


Part No.	Item
858-44	Double bolt
858-45	Shoulder bolt
858-46	Lever
858-47	Lever
858-48	Bronze bush
858-49	Pressing roller

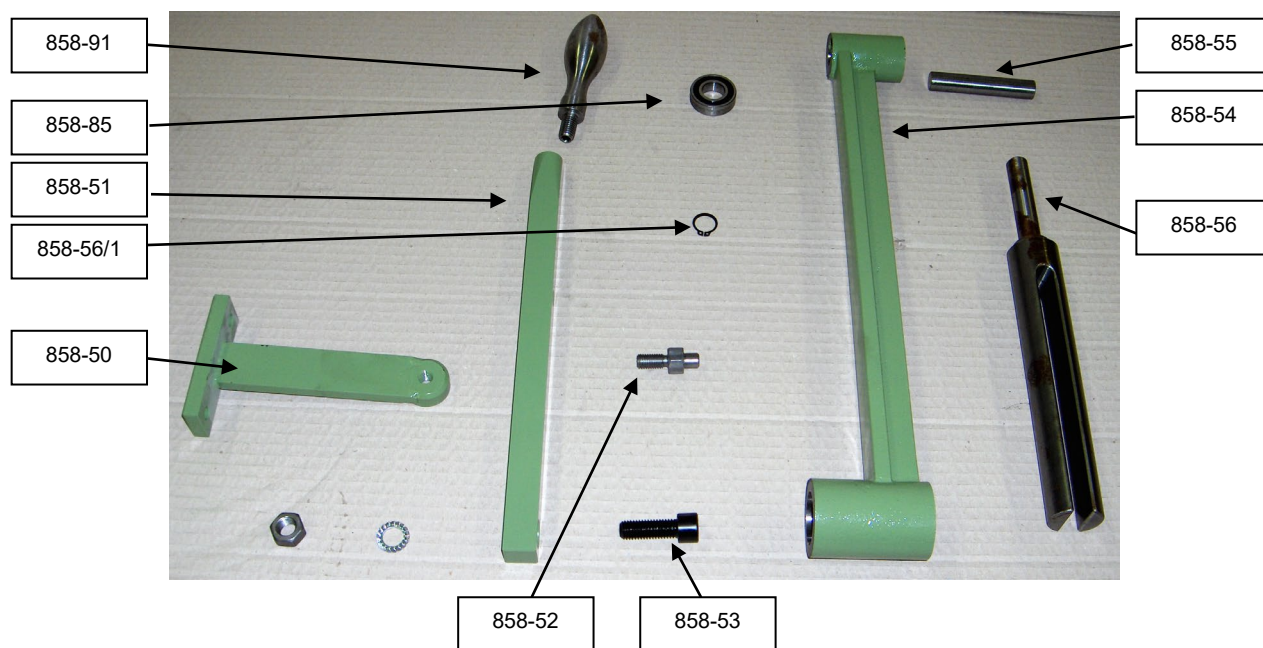

Part No.	Item
858-50	Support
858-51	Clutch lever
858-52	Treaded bolt
858-53	Head screw
858-91	Ball type handle
858-54	Winding-up lever
858-55	Pin
858-56	Winding-up shaft
858-56/1	Locking ring Ø 15 mm
858-85	Ball bearing

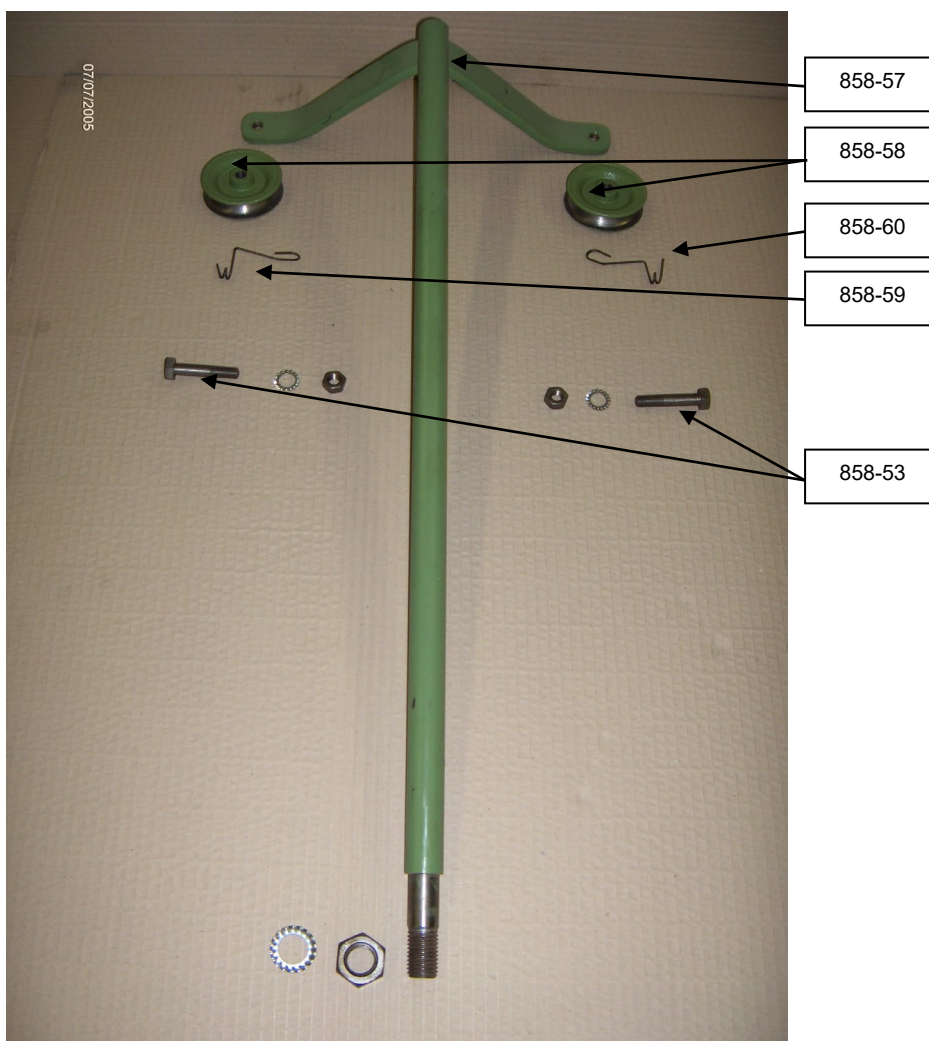

Part No.	Item
858-57	Sheave support
858-58	Sheave
858-58/1	Screw
858-59	Wire guide right
858-60	Wire guide left

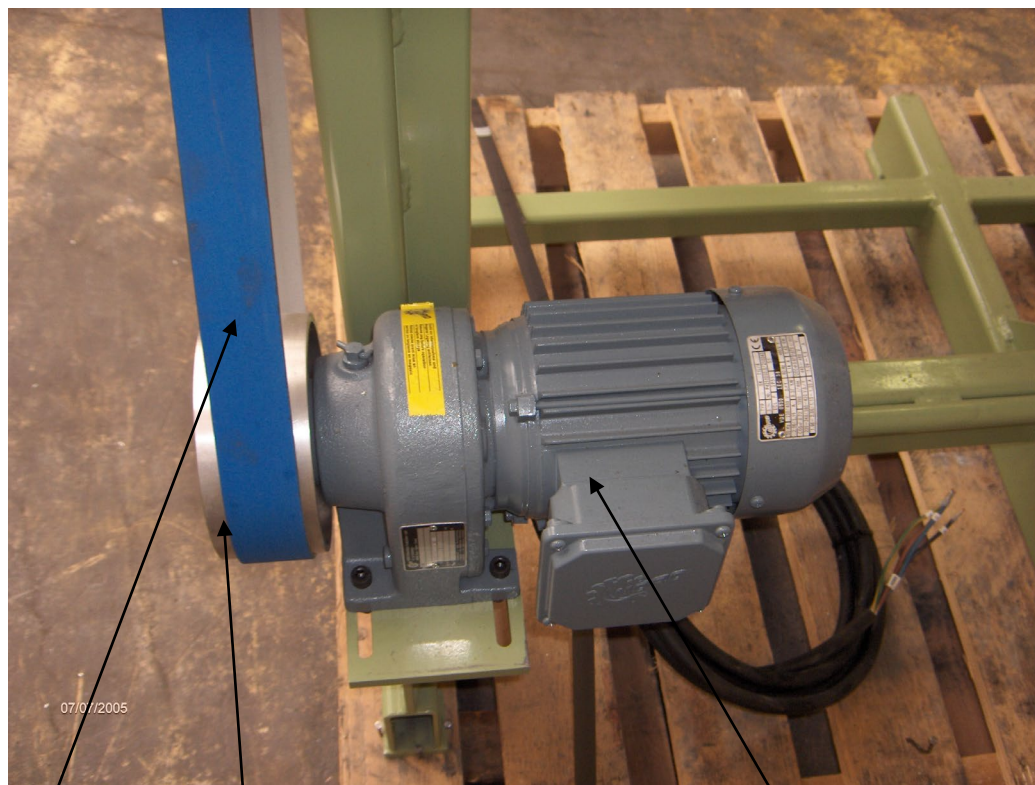

858-75

858-71

858-72

858-74

Part No.	Item
858-71	Pulley
858-72	Washer
858-74	Gear motor
858-75	Driving belt

